

# INSTRUCTIONS FOR USING THE NVH DISHWASHER



## **So, you want to use our super Proton Washrite commercial dishwasher?**

It's super because it has 2 superfast washing cycles – 2 minutes (for lightly soiled crockery) or 3 minutes (for moderately soiled), and its washing & drying performance are also super!

It's also very environmentally friendly because it only uses and heats up 3 litres of water for the second and each subsequent wash cycle.

However, it is different to a domestic dishwasher. But, despite your possible apprehension initially, it really is quite simple to use!

First of all, there's no need to worry about the detergent and rinse aid as they are dosed automatically and directly into the machine.




Secondly, there is an external water softener which our Caretaker will only need to service every 2 or 3 weeks, so you won't have to worry about this.




So, all you have to do is to follow the step by step instructions on the ensuing pages .....

**But please note!  
It will take ~40 minutes for the  
dishwasher to heat the water  
initially. So, please plan ahead!**

## Stage 1 – Preparing to use the dishwasher

		
<p>Open the dishwasher</p>	<p>Take out the 3 baskets and 2 drip trays and place on the worktop above dishwasher</p>	<p>View the grey plastic drain plug and filter cage</p>

		
<p>Ensure that the filter cage is in place, that the 'plug' end is inserted right to the bottom and then twist to the right by about 90°. Then, <b>CLOSE</b> the door – it will need a firm push.</p>		<p>Go to the Master Switchboard near the door and switch on the dishwasher</p>

		
<p>Press the yellow button on the left - the green light will come on. Do <b>NOT</b> press any other buttons yet</p>	<p>You will now hear water filling the wash and rinse tanks</p>	<p>When the tanks have been filled the orange light will come on and the heating of the water begins</p>




**It will take about ~40 minutes to heat the wash water to 60°C, and the rinse water to 82°C. So, you'll need to allow this time before you plan to wash any crockery etc**

When the water has been heated the orange light will go out AND there will no longer be the sound of the water heating.




## Stage 1 – Preparing to use the dishwasher (contd)

*Please use the following work place layout:*

- *Work from left to right*
- *Place a drip tray on left near the slops sink in readiness for loading the basket*
- *Dishwasher in the middle*
- *Place a drip tray on right in readiness for the basket being taken out of the dishwasher to dry.*

		
<p>Take the dirty crockery etc to the slops sink, empty out any slops and place the crockery etc in the appropriate basket. If necessary, rinse crockery under the tap before loading the basket</p>	<p>Place basket of dirty items (<b>only 1 basket</b>) in dishwasher. Then, <b>CLOSE</b> the door – it will need a firm push. If ~40 minutes haven't yet elapsed you will still hear the water heating.</p>	<p>When the water has finished being heated the orange Boiler Temperature light will go out AND there will no longer be the sound of the water heating.</p>

## Stage 2 – Using the dishwasher

		
<p>Select which cycle time you want to use by pushing &amp; toggling the yellow button. The appropriate light will come on (II above)</p>	<p>Press the Cycle button and the orange light will go on. <u>You will hear the dishwasher in operation.</u> You should now be preparing the next basket to be washed.</p>	<p>After 2 (or 3), minutes the orange Cycle light will go out</p>



You will hear some of the wash water being pumped out.

You will then hear the dishwasher topping-up the rinse tank with clean water.



Take the basket out of the dishwasher and place on the drip tray to the right above, and leave to dry for ~3 minutes

There might be a short period of the water being heated.

Place the next basket to be washed in the dishwasher and proceed as before ....



Take the basket of dried crockery to the appropriate cupboard, unload and place items as labelled on the cupboard shelves.



After you have completed all the washing you need to do, press the yellow button on the left and the GREEN LIGHT WILL GO OUT.

You will then hear water being pumped out. After a couple of minutes open the door.






You will find some water in the bottom of the dishwasher.

Place your hand on the top of the plug, twist to the left and pull out.




Please **Leave** the debris basket in place.




The pump will continue working until all the water has been pumped out. The pump will switch-off automatically.

Remove the debris basket.

		
<p>Remove any debris from the basket and place it in the rubbish bin. Rinse the basket.</p>	<p>Replace the debris basket. Replace the plug - taking great care to ensure that the 'solid' end goes right to the bottom and that the vented end is at the top. Firmly push the plug down and twist it to the right by about 90°.</p>	<p>Wipe &amp; dry out the inside of the dishwasher including all the corners.</p>

### Stage 3 – Clearing up & Cleaning up

		
<p>Replace the 2 drip trays at the bottom of the dishwasher. Replace the 3 baskets on top, with all 3 hand holds facing to the front and having placed the cutlery basket in the top wash basket</p>	<p>Wipe down the front of the dishwasher</p>	

		
<p>Leave the door open for ~30 minutes to allow the dishwasher to air out. Close the door before leaving. It will need a firm push.</p>	<p>Wipe dry all the worktops where you have placed the drip trays and/or baskets.</p>	



Wipe dry all the worktops where you have placed the drip trays and/or baskets



Finally, go to the Master Switchboard near the door and switch off the dishwasher